


Beer microwave sterilization equipment LD1913

The advantages of our company:

1. Strong research and research capabilities.
2. Modern production line.
3. Purchase services: professional, authoritative and considerate.
4. After-sales service: responsibility.
5. Footprints of microwave beer sterilization machinery around the world: East Asia (Korea), Southeast Asia (Indonesia and Philippines), Central Asia (Uzbekistan), Europe (Romania, Hungary, Turkey, UK), United States (Canada, Dominica, Brazil, etc.) and Africa (South Africa, Nigeria, Egypt, etc.).

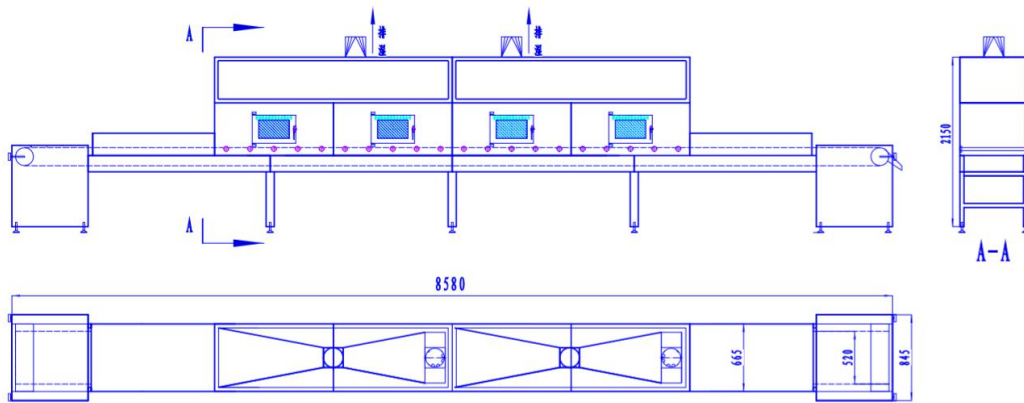

LD1913 Beer microwave sterilization equipment schematic

1. Conveyor belt 2, suppressor 3, strong microwave sterilization zone 4, partition plate 5, air inlet 6, fan 7, tunnel type microwave cavity 8, observation window 9, energy absorption chamber 10, suppression reflection sheet 11, inlet and outlet 12, conveying hole

Technical parameters of beer microwave sterilization equipment models:

Model	DL-12 KW	DL-30KW	DL-50KW
Microwave frequency	2450/915MHz	2450/915MHz	2450/915MHz
Output power	12 KW	30 KW	50 KW
Transmission speed(adjustable)	0-5m / minute	0-5m / minute	0-5m / minute
Leakage value	≤3mw/ cubic meter	≤3mw/ cubic meter	≤3mw/ cubic meter
Size (mm)	7000x840x1800	10500x840x1800	12500x1200x1800
Sterilizing ability	120-150kg/h	300-400kg/h	500-600kg /h

Our beer microwave sterilization equipment and other machines have established

partnerships with many countries.

We sincerely hope that the beer microwave sterilization equipment can help you solve the disinfection problem of liquid beverages. With the protection of the environment, our beer microwave sterilization equipment will never discharge any waste gas or waste water during the treatment process and it is the leader in the new era of high technology. If you are interested in our beer microwave sterilization equipment, you can click on it for more information.